



## **CORDLESS KETTLE VKCL17CDK**



**1.7L, 1850-2200W  
220-240V~ 50-60Hz**

**BEFORE USING THE APPLIANCE, PLEASE READ CAREFULLY!!  
PLEASE KEEP IT HANDY FOR FUTURE USE!!**

## **IMPORTANT SAFETY INSTRUCTIONS**

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
3. The attached base can not be used for other than intended use.
4. Do not operate the appliance without load to avoid damaging the heat elements.
5. Unplug from the outlet when not in use.
6. Do not let the cord hang over edge of table counter or touch hot surface.
7. Do not place on or near a hot gas or electric burner or in a heated oven.
8. Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
9. Ensure that kettle is used on a firm and flat surface where the children can't touch, this can prevent from overturning the kettle to damage the person or kettle.
10. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
11. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
12. Be careful when opening the lid for refilling when the kettle is hot.
13. Close supervision is necessary when any appliance is used by or near children.
14. Do not touch the hot surface. Use the handle or the button.
15. Extreme caution must be used when moving an appliance containing hot water.
16. The appliance is not a toy. Do not let the children play it.
17. The use of attachments that are not recommended by the appliance manufacturer may result in fire, electric shock or

personal injury.

18. While boiling water, avoid to contact steam from the spout when water is boiling or just after it has switched off. Do not be anxious to uncover the lid.

19. Unplug from outlet when not in use and before cleaning; Allow it to cool before putting on or taking off parts and before cleaning the appliance.

20. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.

21. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

22. Do not use the appliance for other than intended use.

23. Do not move the unit while the kettle is switched on.

24. The kettle can only use with the stand provided.

25. If the kettle is overfilled, boiling water may be ejected.

26. Do not use the kettle outdoors.

27. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

28. Children should be supervised to ensure that they do not play with the appliance.


29. This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.

30. Save these instructions.

31. This appliance has been incorporated with a grounded plug.

Please ensure the wall outlet in your house is well earthed

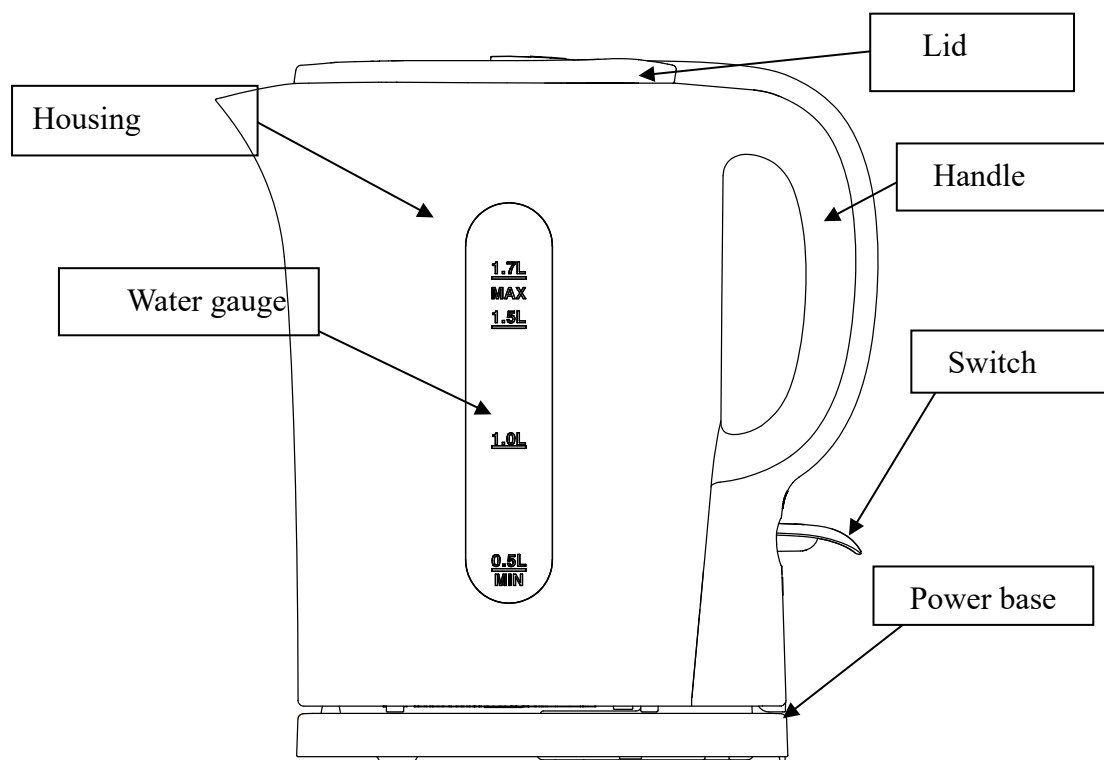

## Know your kettle

### Before initial use

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

### Operation

1. To fill water into the kettle, remove it from the power base and open the lid by lifting the lid handle, fill with the desired amount of water to the kettle. Always fill the kettle between the minimum (0.5L) and maximum (1.7L.) marks. Too little water will result in the kettle switching off before the water has boiled.

**NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the outlet.**

2. Close the lid. Position the kettle on the power base in place. Make sure the kettle contact with the power base completely.
3. Connect the plug into a power outlet. Press down the switch to “I” position and the



switch light illuminates. Then start to boil the water. The kettle will switch off automatically once the water has boiled and the switch light extinguishes. You can shut off the power by pressing the switch at any moment during boiling water.

**NOTE: Ensure that switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is constrained or if the lid is left open.**

4. Lift the kettle from the power base and then pour the water.

**NOTE: Operate carefully when pouring the water from your kettle as boiling water may result in scald, besides, don't open the lid while the water in the kettle is hot.**

5. The kettle will not re-boil until the switch is uplifted. Allow to cool for 15~20 seconds before reopening to boil water. The kettle may be stored on the power base when not in use.

**NOTE: Ensure power supply is turned off when kettle is not in use.**

## **Boil-dry protection**

Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.

## **Care and cleaning**

Always disconnect the appliance from the power outlet and leave it to cool down completely before cleaning.

Never immerse the kettle or cord in water, or allow moisture to contact with these parts.

### **Removal of mineral deposits**

Mineral deposits in tap water may cause the kettle interior to discolor. To remove this build-up, use non-toxic Liquid Descaler.

#### **Alternatively:**

1. Fill the kettle with 3 cups of white vinegar and the remainder of water and be allowed to stand overnight. **Do not boil.**
2. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth, fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will then be ready to use.

### **Cleaning external housing**

Wipe the external housing with a wild and damp cloth or cleaner.

**CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle.**


### **Cleaning the filter**

Remember to clean the filter with a wild and damp cloth at intervals.

### **Storage**

When not in use or storage, the power cord may be wound around the cord storage under the base of kettle.

### **Environment friendly disposal**

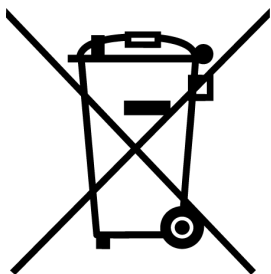

You can help protect the environment!  
Please remember to respect the local regulations:  
hand in the non-working electrical equipments to  
an appropriate waste disposal center.



## HEAD OFFICE

Sukari Industrial Estate-Off Thika Highway  
Exit 10-next to Kenyatta University  
P.O Box 402-00606, Nairobi, Kenya  
TEL: +254-20-3699000  
info@hotpoint.co.ke

## OUR OUTLETS

Sarit Centre, Garden City, Village Market, CBD, Imaara  
Mall, Riara, Karen Binaa Complex, Yaya Centre

Likoni Mall

Tel: +254-20-3699500

Nyali Centre

Tel: +254-20-3699700

Eldoret - Rupa Mall

Tel: +254-20-3699650

Kisumu - Mega City Mall

Tel: 020 3699850

Rwanda Head Office

Plot #624, KK 10 AVE,

Tel: +250788381774

## SERVICE CENTRES

Sarit Centre-Westlands, Nairobi

Tel: +254-20-3699000

Email: servicesarit@hotpoint.co.ke

Sukari Industrial Estate-Off Thika Highway

Exit 10-next to Kenyatta University

Tel: +254-20-3699400

Email: svcruiru@hotpoint.co.ke

Mombasa-Likoni

Tel: +254-799 996996/ 799 996990

+254-20-3699550

Email: servicemsa@hotpoint.co.ke

# Von®

DESIGNED TO LOVE

## Appliances & Electronics you're proud to own



Follow us on IG & Tik Tok: [Von\\_designedtolove](#) & FB: [VON](#)

Customer Care: 0800720404

# VON HOME APPLIANCES WARRANTY

**VON provides a 12 months warranty for this product from the date of purchase.**

## **TERMS & CONDITIONS:**

|  |  |
|--|--|
| <p><b>1</b> The warranty is valid for 12 months from the date of purchase.</p> <p><b>2</b> This card must be completed and returned for registration of the promised warranty to M/S Hotpoint Appliances Ltd within two weeks of purchase, failing to which this warranty will be deemed to be null and void.</p> <p><b>3</b> Warranty is given that the product recorded above is free from factory faults and any defect which in our judgment is due to manufacturing will be serviced free-of-charge and faulty part(s) will be replaced, not the product. This warranty is a quality assurance warranty and applicable for repairs and service as stated. This is not a replacement warranty.</p> <p><b>4</b> All customers are strongly advised to protect their equipment from damaging power surges and dips with the recommended voltage stabilizers. Damage occurring to the equipment in the event of failure to do so will void this warranty. All products must be installed correctly according to the instructions stated in the manual and must be used solely for purposes intended/designed. Electrical damage caused by power supply other than the specified voltage and cautions will not be covered by this warranty. Similarly, damage caused by lightning /power surges/ transformers/ high voltage will not be covered by this warranty.</p> <p><b>5</b> This warranty applies only to VON branded products that have been purchased within Kenya from either M/S Hotpoint Appliances Ltd or any of our authorized dealers.</p> <p><b>6A</b> This warranty does not cover plastic parts, ordinary wear and tear, tampering and repairs undertaken by unauthorized sources without prior permission of M/S Hotpoint Appliances Ltd, negligence or accident or cases where original serial number of the product purchased has been altered or erased or removed.</p> <p><b>6B</b> This warranty does not cover accidental damages, misuse or abuse, to the cabinet parts, knobs or consumable items such as batteries, belts, bulbs, glass, trays, taps, and others.</p> <p><b>6C</b> This warranty will be rendered invalid if the item is misused/tampered and or damaged by an unauthorized individual/institute during delivery, installation or repair.</p> | <p><b>7</b> Damage/fault caused by insects/pests is also not covered by this warranty.</p> <p><b>8</b> This warranty does not cover any transport related charges/costs to attend/deliver/collect any malfunctioning product. However, the return will be provided at no cost/charge if the item is under warranty and requires to be returned to the end user.</p> <p><b>9</b> No alteration will be accepted made on the warranty card as far as the model, serial numbers and the date is concerned.</p> <p><b>10</b> In case of the item being exchanged, this warranty card must be surrendered in exchange for another one.</p> <p><b>11</b> Any warranty claim must be accompanied with this warranty card; no claim would be accepted whatsoever without the original warranty card.</p> <p><b>12</b> Hotpoint Appliances Ltd shall endeavor in its best ability to repair within 48 (forty-eight) hours, subject to availability of manufacturer's recommended genuine parts. Should the said spares be not available, then in that event Hotpoint Appliances shall be absolved from its responsibility as this event shall be deemed as a Force Majeures.</p> <p><b>13</b> The purchaser agrees that the sole liability of Hotpoint Appliances Ltd with respect to defective goods shall be limited as set forth in this warranty and Hotpoint Appliances Ltd shall not be liable under any theory of relief, including breach of contract, negligence, strict liability, tort or otherwise for incidental consequential or other damages including but not limited to loss of profits, injury to property, or loss of use of the goods. In no event shall the liability of Hotpoint Appliances Ltd hereunder exceed the purchase price actually paid by purchaser for the goods. The foregoing warranty is in lieu of all the other expenses and implied warranties including, without limitation, warranties of merchantability and fitness for purpose.</p> <p><b>14</b> This warranty shall be subject to the Laws of Kenya.</p> |
|--|--|

**YOU MUST HAVE THE ORIGINAL WARRANTY CARD (OVERLEAF) DULY FILLED IN WITH THE ORIGINAL AUTHORISED DEALER'S STAMP (INDICATING DATE OF PURCHASE) ALONG WITH PURCHASE RECEIPT TO CLAIM THE WARRANTY SERVICE IN FUTURE.**

**PLEASE INDICATE THE PROBLEM CLEARLY TO THE RECEIVING PERSON AT THE SERVICE CENTER/ COLLECTION POINT TO ENABLE FASTER AND ACCURATE DIAGNOSIS.**

**THIS PRODUCT IS DESIGNED FOR DOMESTIC USAGE ONLY**

## **WARRANTY CARD**

(Please keep it duly filled and stamped in original, safe for future)

NAME:.....

.....

ADDRESS:.....

.....

TEL/MOBILE NO. ....EMAIL ID.....

P.O. BOX: .....

DATE OF PURCHASE: ...../...../.....

DEALER'S NAME, BRANCH & ADDRESS: .....

.....

INVOICE NO.....

DEALERS STAMP:

...